

#### Base Kit

- 1 Side Board (x2)
- 2 Bottom Board
- 3 Fishing Rod Holder
- 4 Top Brace
- 5 Reel Set Support Brace

#### Included in Bundle

- 6 Kreg Pocket-Hole Jig 320
- 7 Kreg VersaGrip™ Clamp - 24"
- 8 Material Thickness Gauge
- 9 #2 Driver Bit
- 10 Easy-Set Drill Bit and Stop Collar
- 11 1 1/4" Pocket-Hole Screws


## WOODWORKING KIT

## FISHING ROD STAND



### STEP 1:

Set Up Your Pocket-Hole Jig  
Scan here to watch the assembly video.

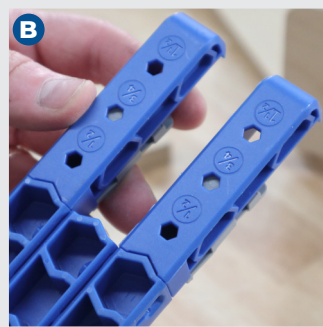

**Note:** You can use most Kreg Pocket-Hole Jigs for this project. Be sure to set up and use your jig according to the manufacturer's instructions, and follow this guide for proper hole placement.

- A** Use Material Thickness Gauge to measure material thickness ( $3/4$ ").
- B** Set jig material thickness to  $3/4$ ".
- C** Set drill bit stop collar to  $3/4$ " (loosen and tighten stop collar with Hex Wrench).

## BEFORE YOU GET STARTED

We want to make sure have you the guidance and resources you need to be successful with this project. Simply scan the QR code below for tips and tricks on setting up your jig, drilling pocket holes, and more.



**WARNING:** Drilling, sawing, sanding or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for personal protection. For more information go to [www.P65Warnings.ca.gov/wood](http://www.P65Warnings.ca.gov/wood).

**WARNING:** Improper assembly, hanging or excessive weight applied to the finished product could result in injury. Follow all instructions provided for assembly. Kreg is not responsible for injuries as a result of improper assembly or use.

**WARNING:** Always wear personal protective equipment certified as such, including safety glasses, hearing protection, and respiratory protection. When using a power tool, always follow the manufacturer's personal protection equipment requirements. Gloves are recommended for handling unfinished wood products.

## STEP 2:


### Drill Pocket Holes in Top Brace



- A** Clamp Top Brace (2) so it is centered in the jig.
- B** Drill two pocket holes, one in each drill guide.
- C** Rotate Top Brace and drill two pocket holes in the opposite end.
- D** Flip Top Brace and clamp onto long side so that one drill guide is approximately 1" from existing pocket hole on one end.
- E** Drill three pocket holes across the long side; one at each end and another approximately in the middle of Top Brace.

## STEP 3:

### Drill Pocket Holes in Bottom Board

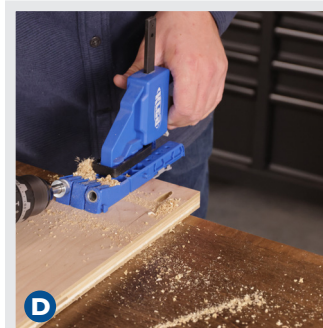

- A** Clamp Bottom Board so outside drill guide is approximately 1" from the edge. Drill one pocket hole using the outside drill guide.
- B** Move the jig to the other edge of Bottom Board and repeat A.
- C** Rotate Bottom Board and clamp the opposite end so outside drill guide is approximately 1" from the edge. Drill one pocket hole using the outside drill guide.
- D** Move the jig to the other edge of Bottom Board and repeat C.

## STEP 4:

### Drill Pocket Holes in Rod Holder



- A** Clamp Fishing Rod Holder so it is centered in the jig.
- B** Drill two pocket holes, one in each drill guide.
- C** Rotate Fishing Rod Holder and drill two pocket holes in the opposite end.

## STEP 5:

### Drill Pocket Holes in Reel Support Brace

**Note:** If using a Kreg Pocket-Hole Jig 320, follow the instructions in the user manual to twist apart the jig and remove the spacer.



**A** Clamp Reel Support Brace so it is centered in the jig.



**B** Drill two pocket holes, one in each drill guide.



**C** Rotate Reel Support Brace and drill two pocket holes in the opposite end.


## STEP 6:

### Attach Bottom Board to Side Board

**Tip:** Adjust drill clutch for driving screws.



**A** Clamp Bottom Board to one Side Board using the reference lines to align the pieces at the correct angle.

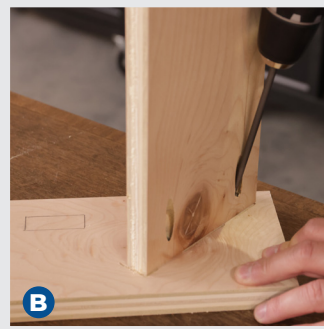

**B** Use #2 driver bit to drive two 1 ¼" pocket-hole screws.

## STEP 7:

### Attach Reel Support Brace to Side Board



**A** Clamp Reel Support Brace to Side Board using reference lines to align pieces



**B** Use #2 driver bit to drive two 1 ¼" pocket-hole screws.

## STEP 8:

### Attach Fishing Rod Holder to Side Board




**A** Clamp Fishing Rod Holder so edge is flush with edge of Side Board.

**B** Use #2 driver bit to drive two 1 1/4" pocket-hole screws.

## STEP 9:

### Attach Second Side Board to Assembly

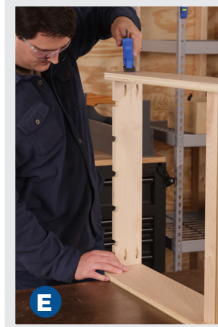

**A** Clamp Second Side Board to assembly, using reference lines to align pieces.

**B** Use #2 driver bit to drive two 1 1/4" pocket-hole screws into Bottom Board.

**C** Reposition clamp to Reel Support Brace.

**D** Use #2 driver bit to drive two 1 1/4" pocket-hole screws into Reel Support Brace.


**E** Reposition clamp to Fishing Rod Holder.

**F** Use #2 driver bit to drive two 1 1/4" pocket-hole screws into Fishing Rod Holder.

## STEP 10:

### Attach Top Brace

**Note:** Clamping is optional in this step.

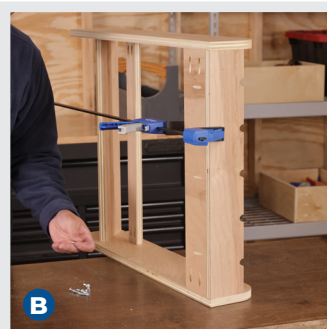

**A** Align Top Brace into assembly so it is flush with the back of the end pieces and snug against the Fishing Rod Holder.

**B** Clamp Top Brace to assembly.

**C** Use #2 driver bit to drive seven 1 1/4" pocket-hole screws into Top Brace.

## STEP 11:

### Finish It



**A** Use paint, stain, stencils, wood burning kit, and more to add personal touches.



**B** Once finished customizing, take a photo and post it with the #builtwithkreg hashtag to show your work and see what others are building with Kreg.

## LEARN MORE WOODWORKING TIPS



Scan here to discover helpful how-to articles and videos filled with woodworking tips and tricks.



## FIND INSPIRATION FOR YOUR NEXT PROJECT



Scan here to browse over 1,000 project plans and discover your next pocket-hole project.



## VISIT KREG ACADEMY



Scan here to visit our Foundations of Building course page and get access to a library of content designed specifically to help you build your woodworking skills.



## WE'RE HERE TO HELP

We want you to have an exceptional project building experience. If you have questions or need support, please get in touch.  
1-800-447-8638 | [technicalsupport@kregtool.com](mailto:technicalsupport@kregtool.com)